



LICENCE CLASSES

PASSIVE FIRE PROTECTION – FIRE COLLARS, PENETRATIONS AND JOINT SEALING LICENCE

Licence Classes

(1) Certify, install and maintain

Scope of work

Certify, install and maintain, inspect and test— fire collars, fire rated penetrations and fire rated joint sealing.

Technical qualifications

- (a) The successful completion of **both** of the following—
- (i) Certificate II in Asset Maintenance (Fire Protection Equipment) PRM 20404 including the successful completion of the following competencies —
 - Identify Passive Fire and Smoke Containment Products and Systems PRMPFES36A; and
 - Inspect and Test Passive Fire and Smoke Containment Products and Systems PRMFES39A; **and**
 - (ii) Prepare a Fire Protection Certification Statement or Report REP 1; or
- (b) successful completion of a course the authority considers is at least equivalent to a course mentioned in paragraph (a);

Managerial requirements

An approved managerial qualification.

Experience requirements

Two years experience, which includes experience gained during an apprenticeship or other training, in—

- (a) the scope of work for the class; or
- (b) other work, if the authority considers experience in the other work is at least equivalent to experience in the scope of work for the class.

Financial requirements

The relevant financial requirements in the board's policies.

Effective From	1/01/09
Scope Amendment	
Technical Amendment	

DEFINITIONS

Certify means

- (a) to give advice or a report, including a certificate, stating that a fire protection system complies with Australian and international standards, Building Code of Australia requirements and manufacturer's specifications after conducting a survey of the system; and
- (b) to give a QBSA licensee certificate under the *Building Regulation 2006* for the work.

Inspect and test means

- (a) to inspect by visual examination the components of fire protection systems or equipment to establish correct settings, physical condition or fitness for purpose under 1-5-5, AS 1851-2005; and
- (b) to test, after inspecting, by the confirmation of correct function or performance of a component or system under 1-5-13, AS 1851-2005.

Install means

- (a) place a fire protection system in position ready for use; or
 - (b) restore a fire protection system to its original operating specifications; or
 - (c) alter a fire protection system; or
 - (d) provide an installer's statement in relation to the work
- Example:** Where the fire system is altered from its original design specifications by way of replacing with components of different specifications, it is **installation**.

Installer's statement means

A statement about the installation of a fire protection system

Maintain means

- (a) inspect and test a fire protection system and any other fire safety measures to ensure continued operation at their original performance levels and in accordance with any relevant Australian Standards; or
- (b) repair or replace defective components to keep a fire protection system in a working order according to original specifications
- (c) carry out preventative maintenance; or
- (d) prepare a maintenance record of the work mentioned in paragraphs (a) to (c).

Maintenance record means

a record of any maintenance carried out.

Preventative maintenance means

lubrication, cleaning, adjustment and replacement of parts for the purpose of minimising faults or malfunctions of a fire protection system.

Example: Where the fire system is not altered from its original design specifications it is **maintenance and repair** ('like for like' replacement of parts).

Survey means

the visual inspection of a fire protection system to identify if the system has been altered, damaged or compromised.

NOTES

(1) REP 1 is a unit from Certificate IV in Fire Systems Compliance 30536QLD