



LICENCE CLASSES

GASFITTING LICENCE

Scope of work

- (1) Install, commission, maintain, test , alter, repair and service a gas system in any building.
- (2) Incidental work of another class.
- (3) However, the scope of work does not include –
 - (a) for a gasfitter who possesses only a gas work authorisation, gas work that can be carried out only by a gasfitter who possesses a gas work licence; and
 - (b) for a gasfitter who possesses only a gas work licence, gas work that can be carried out only by a gasfitter who possesses a gas work authorisation.

Technical qualifications

- (a) Possession of a gas work licence or a gas work authorisation other than an interim authority.
- (b) In this section –
 - (i) “**interim authority**” means an interim gas work licence or authorisation granted under the *Petroleum and Gas (Production and Safety) Act 2004*.
 - (ii) “**gas system**” see the *Petroleum and Gas (Production and Safety) Act 2004*, schedule 2.
 - (iii) “**gas work**” see the *Petroleum and Gas (Production and Safety) Act 2004*, section 725.
 - (iv) “**gas work authorisation**” means a gas work authorisation under the *Petroleum and Gas (Production and Safety) Act 2004*.
 - (v) “**gas work licence**” means a gas work licence under the *Petroleum and Gas (Production and Safety) Act 2004*.

Managerial requirements

An approved managerial qualification.

Financial requirements

The relevant financial requirements in the board’s policies.

1 st Introduced	1/9/03
Scope Amendment	10/3/06
Technical Amendment	10/3/06